


### Wire Fence


#### STEP 1.

Holding Bin Front in flat position, insert wire ends into second row of front holes. Lower until first bend in wires rest on shelf surface (FIGURE 1).

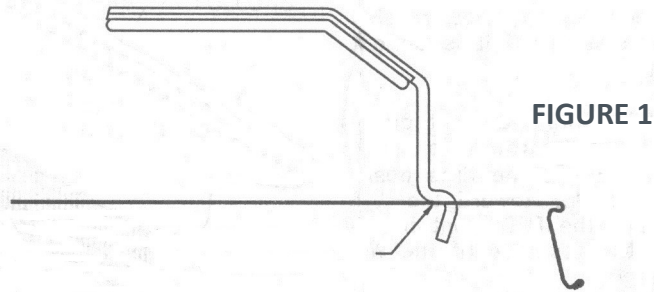

#### STEP 2.

Lift Bin Front at point show and revolve forward. (FIGURE 2).

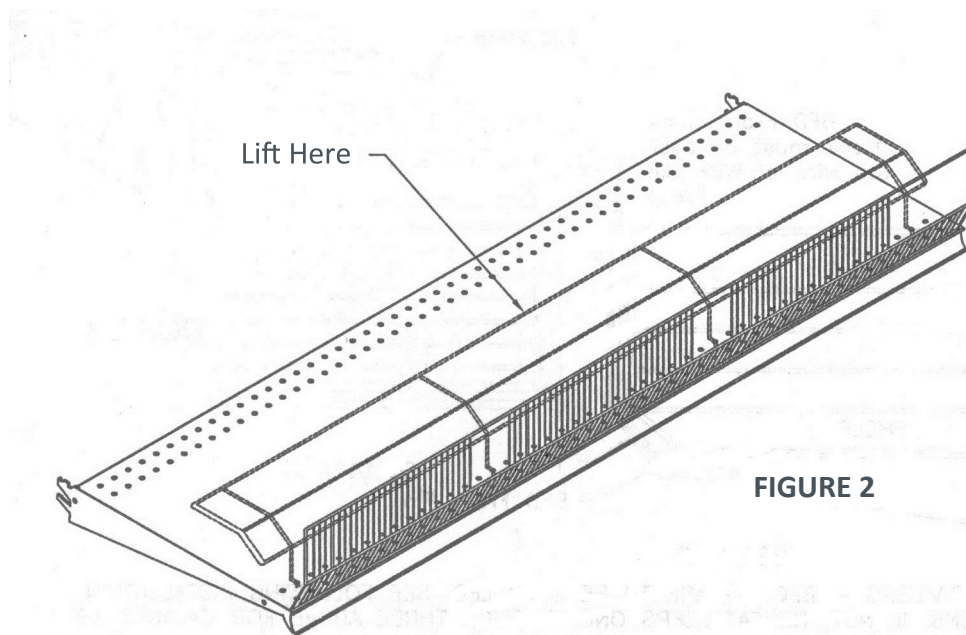

289-LWBF336  
289-LWBF348  
289-LWBF548

## Wire Divider

### STEP 1.


Holding the Wire Divider as shown, place it's Rear Bent Pin in the rear row of holes (FIGURE 1).

### STEP 2.


Using the rear pin as a pivot, revolve the Wire Divider clockwise until it is upright (FIGURE 1).

### STEP 3.


Lower the Wire Divider until the front pin drops into the front row hole (FIGURE 2); at the same time push the top of the Wire Fence toward the divider so that the Wire Divider front hook will capture the top wire of the Wire Fence (FIGURE 3).

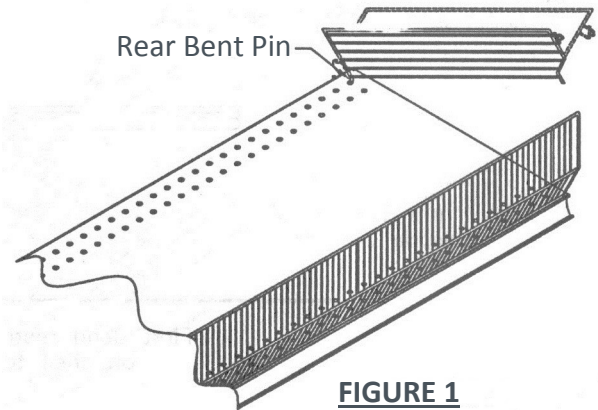

**FIGURE 1**

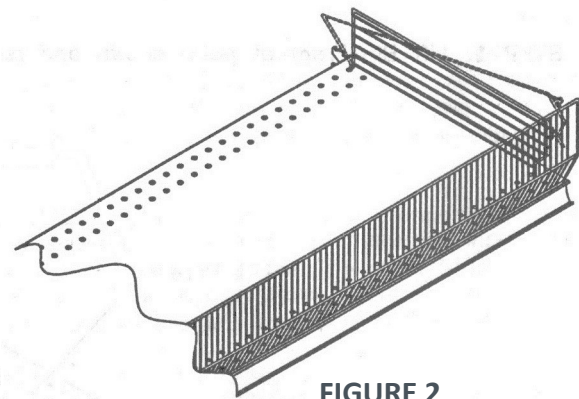

**FIGURE 2**

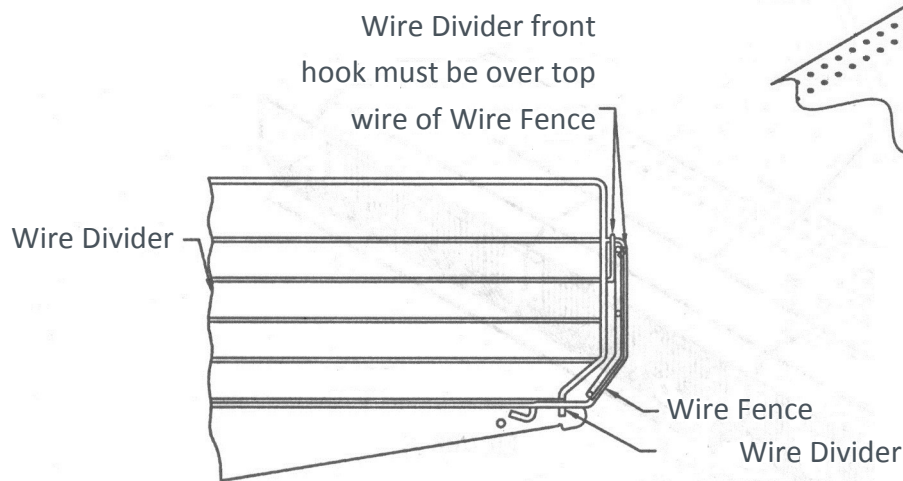

**FIGURE 3**

289-LBFD310  
289-LBFD313  
289-LBFD315  
289-LBFD316  
289-LBFD317  
289-LBFD319  
289-LBFD322  
289-LBFD515  
289-LBFD517  
289-LBFD519  
289-LBFD522