


PARTS LIST

- 1 24" X 30" Plexiglass
- 3 Sets of Hardware

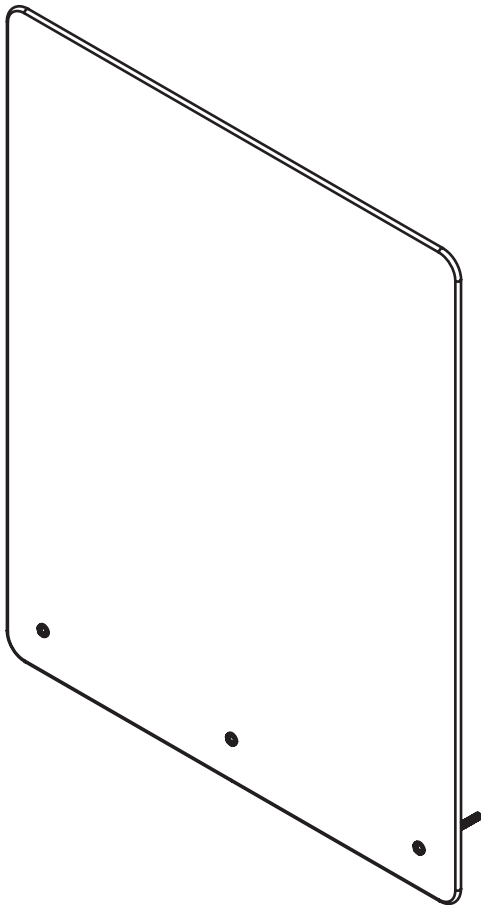


INSTALLATION INSTRUCTIONS

Step 1: Mark three points 13" apart (Use pre-drilled holes on sneeze guard as a template)

Step 2: Drill a 5/16" diameter hole at each point

Step 3: Use a Phillips-head screwdriver and a 7/16" wrench to tighten hardware to sneeze guard in order shown below

Step 4: Remove protective film from plexi surface

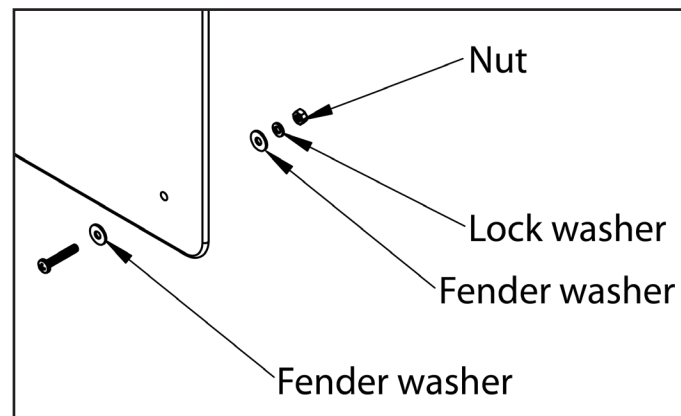

To remove protective film, simply peel from the corner.

